

OPERATING INSTRUCTION HANDBOOK

MANUAL SCISSOR LIFT PALLET TRUCK/

ELECTRICAL SCISSOR LIFT PALLET TRUCK WITH ELECTRIC

LIFTING

WARNING

Do not use the truck before reading and understanding these operating instructions.



NOTE:

- Please check the designation of your present type at the last page of this document as well as on the ID-plate.
- Keep for future reference.

FOREWORD

Before operating the scissor lift pallet truck, read this ORIGINAL INSTRUCTION HANDBOOK carefully and understand the usage of the truck completely. Improper operation could create danger.

This handbook describes the usage of a scissor lift pallet truck with manual or electric lifting function. When operating and servicing the truck, make sure, that it applies to your type.

**Chapter 11 describes specialized stipulations and regulations for the American market.
Follow these instructions and stipulations if you operate the truck within the American market!**

Keep this handbook for future reference. If this or the warning! caution labels are damaged or got lost, please contact your local dealer for replacement.

This truck complies, if applicable, with the requirements according to EN 3691-5 (Industrial trucks- safety requirements and verification, part 5), EN 12895 (Industrial trucks- electromagnetic compatibility, only electric lift version), EN 12053 (Safety of industrial trucks- test methods for measuring noise emissions, only electric lift version), EN 1175 (Industrial truck safety – electrical requirements, only electrical lift version), assumed the truck is used according to the described purpose.

ATTENTION:

- Environmentally hazardous waste, such as batteries, oil and electronics, will have a negative effect on the environment, or health, if handled incorrectly.
- The waste packages should be sorted and put into solid dustbins according to the materials and be collected disposal by local special environment protection bureau. To avoid pollution, it's forbidden to throw away the wastes randomly.
- To avoid leaking during the use of the products, the user should prepare some absorbable materials (scraps of wooden or dry duster cloth) to absorb the leaking oil in time. To avoid second pollution to the environment, the used absorbable materials should be handed in to special departments in terms of local authorities.
- Our products are subject to ongoing developments. Because this handbook is only for the purpose of operating /servicing the pallet truck, therefore please have understanding, that there is no guarantee out of particular features out of this handbook.

NOTE: On this manual, the left sign means warning and danger, which can lead to death or

- serious injury if not followed.

Copyright

The copyright remains with the company, mentioned on the CE- certificate at the end of this document or, if sold within the USA, with the company, mentioned on the company sticker.

1. CORRECT APPLICATION

It is only allowed to use this scissor lift pallet truck according to this instruction handbook.

This truck is a manually operated scissor lift pallet truck with manual or electric lifting function designed for transporting of palletized loads, or to be used stationary as a working platform on level ground. It is not suitable for use in potentially explosive locations and hostile environments. Do not lift or carry person and don't use this truck for other purpose than its intended use. A wrong usage can cause human injuries or can damage equipment.

The "operator" or "user" is in the meaning of this instruction handbook a natural or legal person who uses the truck himself or on behalf it is used. The operator or user must ensure that the truck is used in the design limits. All danger to life or danger to the user, operator or to third parties must be avoided. The operator! the operating company has to ensure the correct usage and has to ensure, that this truck is used only by staff, which is trained and authorized to use this truck.

The truck has to be used on substantially firm, smooth, level and prepared surfaces.

Driving with the load on slopes is not allowed. The load must be placed approximately on the longitudinal centre plane of the truck and must be in satisfactory condition.

The capacity is marked on the identification plate and depending on the version eventually additionally on the capacity sticker. The operator has to consider the warnings and safety instructions.

The scissor lift pallet truck is intended to be used for indoor applications with ambient temperatures between +1°C and + 40°C. Operating lighting must be minimum 50 Lux.

Modification

No modifications or alterations to this scissor lift pallet truck which may affect, for example, capacity, stability or safety requirements of the truck, shall be made without the prior written approval of the original truck manufacturer, its authorized representative, or a successor thereof. This includes changes affecting, for example braking, steering, visibility and the addition of removable attachments. When the manufacturer or its successor approve a modification or alteration, they shall also make and approve appropriate changes to capacity plate, decals, tags and operation and maintenance handbooks. By not observing these instructions, the warranty becomes void.

SCISSOR LIFT PALLET TRUCK

a. Main components

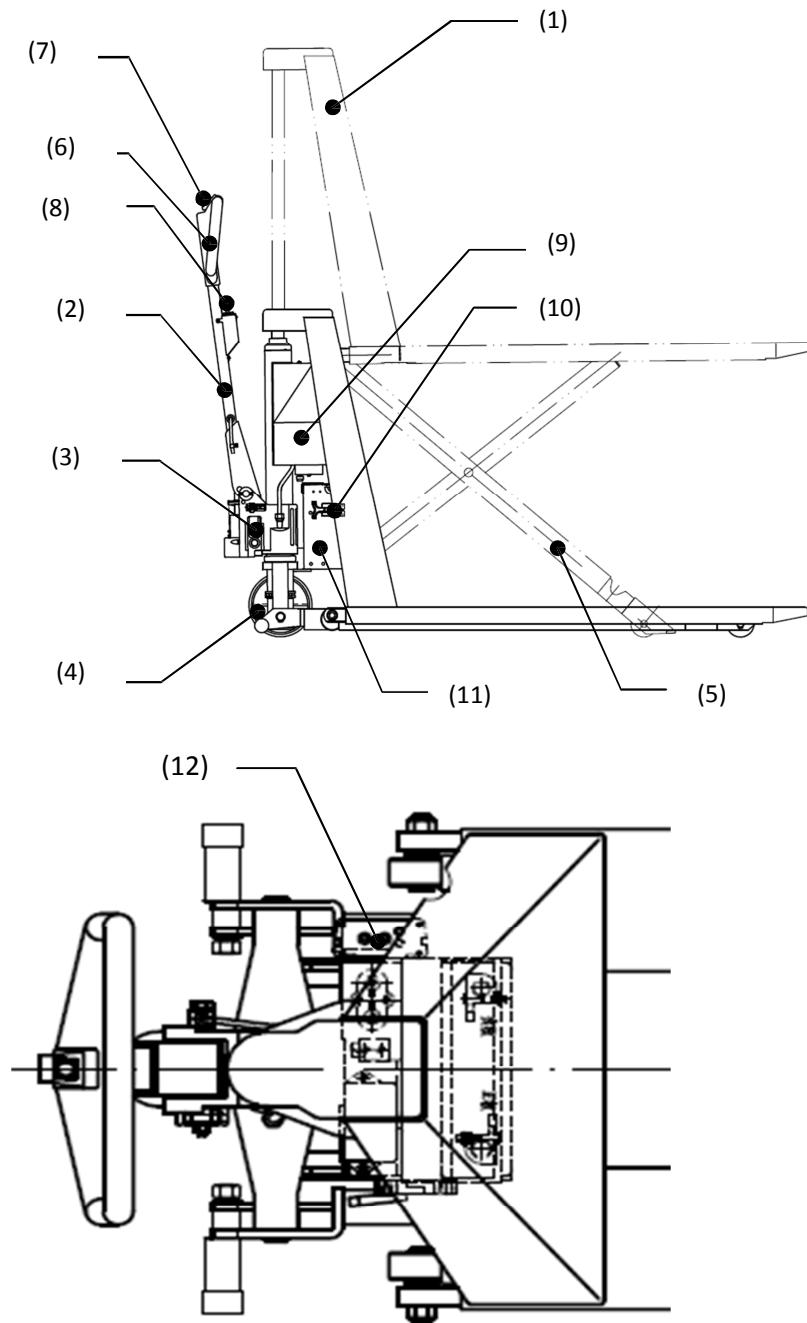


Fig.1: Overview

- | | | | |
|---|------------------------------------|------|----------------------------|
| 1 | Chassis | (7) | Lifting button |
| 2 | Tiller arm | (8) | Key switch |
| 3 | Hydraulic cylinder and manual pump | (9) | Hydraulic power pack |
| 4 | Steering wheel | (10) | Emergency plug |
| 5 | Scissors | (11) | Battery (inside) |
| 6 | Control lever | (12) | Onboard charger (optional) |

b. Main technical data

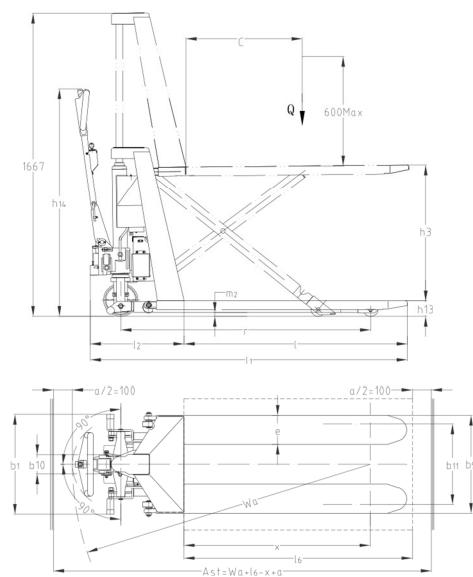


Fig. 2: Technical data

Table 1: Main Technical data for standard version! other version on request

Technical data sheet for industrial trucks acc. to VDI 2198				
1.2	Manufacturer's type designation	HUES10B	HUHS10B	
1.3	Drive	electric	manual	
1.4	Operator type	hand	hand	
1.5	Load Capacity / rated load	Q(t)	1.0	1.0
1.6	Load centre distance	c(mm)	600	600
1.8	Load distance ,centre of drive axle to fork	x(mm)	978	978
1.9	Wheelbase	Y(mm)	1310	1310
2.1	Service weight md. battery(see line 6.5)	kg	152	122
2.2	Axle loading, laden front/rear	kg	767 / 371	760 / 348
2.3	Axle loading, unladen front/rear	kg	35 / 117	33 / 89
-	3.1	Tyres	PU	Pu
	3.2	Tyre size, front	mm	Ø 180x50
	3.3	Tyre size, rear	mm	Ø 75 x 50
	3.4	Additional wheels(dimensions)	mm	
	3.5	Wheels, number front/rear(x=driven)		2/ 2
	3.6	Tread, front	bI0 (mm)	155
	3.7	Tread, rear	bII (mm)	440
Cdc E o o-c	4.4	Lift (standard mast)	h3 (mm)	715
	4.5	Height, mast extended	h4 (mm)	1660
	4.9	Height of tiller in drive position mm/max	h14(mm)	1254
	4.15	Height, lowered	h13 (mm)	85
	4.19	Overall length	l1 (mm)	1715
	4.20	Length to face of forks	l2 (mm)	492
	4.21	Overall width	bI (mm)	575/ 695
	4.22	Fork dimensions	s/e/l	45/160/1170
	4.25	Distance between fork- arms	b5 (mm)	540/ 685
	4.32	Ground clearance, centre of wheelbase	rn2 (mm)	18
	4.34	Aisle width for pallets 800X1200	Ast (mm)	1986
	4.35	Turning radius	Wa (mm)	1564
o	5.2	Lift speed, laden/ unladen	rn/s	21/45
	5.3	Lowering speed, laden/ unladen	rn/s	53/63
				81/61
o	6.2	Lift motor rating at S3 15%	kW	0,58
	6.3	Battery acc.to DIN 43531/35/ 36 A, B, C,	No, maintenance-free	
	6.4	Battery voltage, nominal capacity KS	V/Ah	12V/52Ah
	6.5	Battery weight	kg	24

Note: black value is our lift pallet trucks' value

C. Description of the safety devices and warning labels

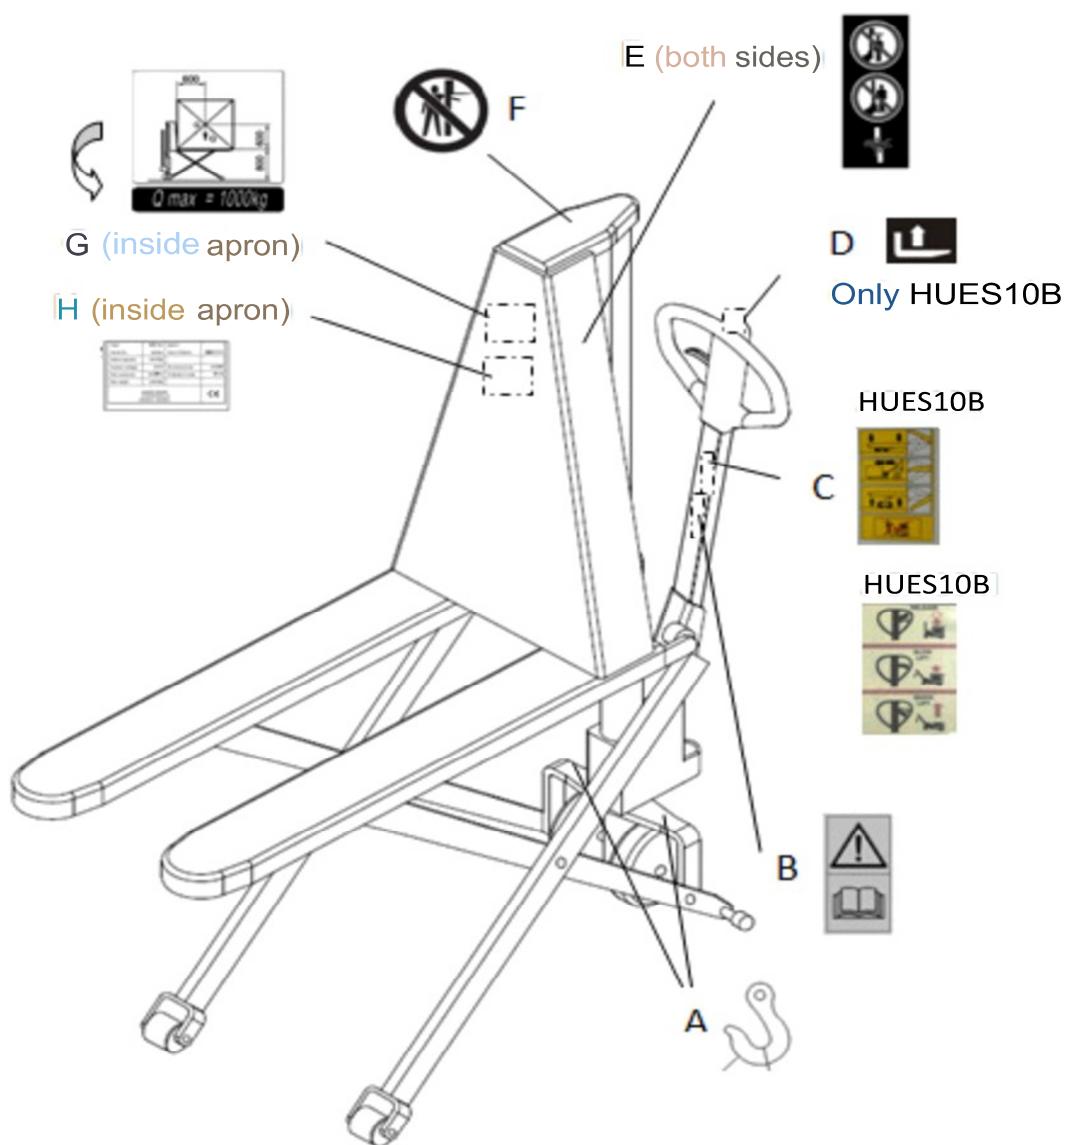


Fig.3: Safety and warning labels

- A Crane hook label
- B Sticker to read and follow these instructions
- C Operating instruction sticker
- D Lifting sign (only HUES10B)
- E Warning decal: Do not step under or on the forks
- F Never reach through
- G Load diagram
- H Identification plate

The safety and warning labels should be placed according to figure 3. The advices on the truck are additional to this handbook. Please follow the operating instructions. If the decals are damaged or missing, please replace them.

d. Identification plate

1. Type

2 Rated capacity

3 System voltage

4 Net weight with/without battery

Name and address of the manufacturer

Load center distance

10 Manufacturing date

11 Option, Wheel combination, fork length,

width over the fork

12 Net weight

1	Type	ACX 10E	Option	yyy x1150	11
2	Serial No.	xxxx	Year of Manuf.	MM/YYYY	
3	Rated capacity	xxx kg	Load center distance	600mm	10
4	System voltage	xx V	Nominal power	xx kW	
5	Net weight with/ without battery	yyy/ xxx kg	Battery mass min/max	xxx / xxx kg	9
6	COMPANY NAME COMPANY ADDRESS			CE	7

1	Type	ACX 10M	Option	yyy x1150	11
2	Serial No.	xxxx	Year of Manuf.	MM/YYYY	
3	Rated capacity	xxx kg	Load center distance	600mm	10
12	Net weight	xxx kg			9
6	COMPANY NAME COMPANY ADDRESS			CE	

3. WARNINGS AND SAFETY INSTRUCTIONS

DO NOT

- Allow other person then the operator to stand in front of or behind the truck when it is moving or lifting/lowering.
- Overload the truck.
- Put foot in front of rolling wheel, Injury could result.
- Use the truck on a slope or inclined surface, the truck may become uncontrollable and create danger.
- Lift or carry people. People could fall down and suffer severe injury.
- Use truck with unstable, unbalanced loosely stacked load.
- Use the truck in explosive atmospheres.
- Pay attention for wind forces. Wind forces might have an influence to the stability or light weights might fall down. Don't use the truck if you can't ensure the stability of the truck.

Watch difference in floor levels when moving the truck. Load could fall down or the truck could get uncontrollable. Keep watching the condition of load. Stop operating table if load becomes unstable.

Practice maintenance work according to regular Inspection. This truck is not designed to be water resistant, therefore use it in dry atmospheres.

4. COMMISSIONING, TRANSPORTING, STORAGE!

REASSEMBLING

a. Commissioning _ Tiller assembling

After receiving our new scissor lift pallet truck you may have to do following before firstly operating the truck:

- Check if are all parts included and not damaged
- Do the work according to the daily inspections as well as functional checks.

Eventually assemble the truck according to following instructions.

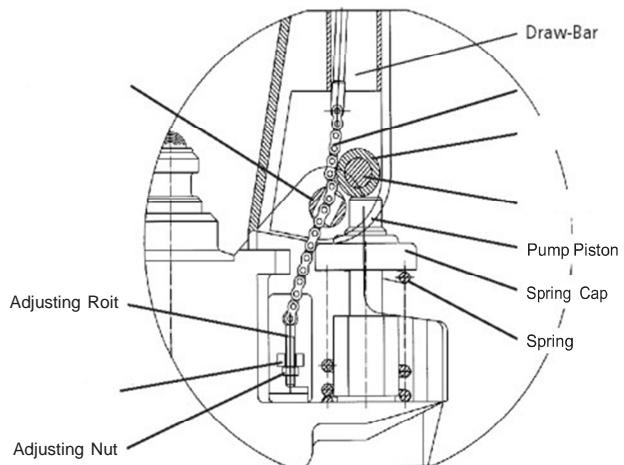


Fig. 7: Side view (symbolic)

The commissioning weight is approximately 10kg / four-pack higher than the product weight.

Before assembling, please make sure, that the following supplied parts are included and not damaged:

- 1 pc axle with hole (4)
- 2 pc dowel pin (5) [one is already assembled with the axle]
- 1 pc pre-assembled tiller arm (1)
- 1 pc pre-assembled chassis with pump unit (6)
- Connect the plug(optional for electric model) (Fig. 1, pos. 10)

Note: The marked number on the tiller arm package and the chassis should be the same.

When attaching the handle, you had better squat just in front of the pallet truck.

- a) Insert the tiller arm(1) into the pump piston, then use a hammer to insert the axle with hole into the hydraulic pump and tiller arm from the right to the left (Fig. 6).
- b) Set the control lever of the handle to the 'LOWER' position, then pass the adjusting nut, adjusting bolt through the hole of the axle with your hand (Fig. 7).
- c) Press the tiller arm down; take away the pin (2, Fig. 5).
- d) Set the control lever of the handle to 'QUICK LIFT' (LIFT) position, then raise the lever plate with the pin (2, Fig. 5) and insert the adjusting bolt into the front slot of lever plate. Note: Keep the adjusting nut under the lever plate.

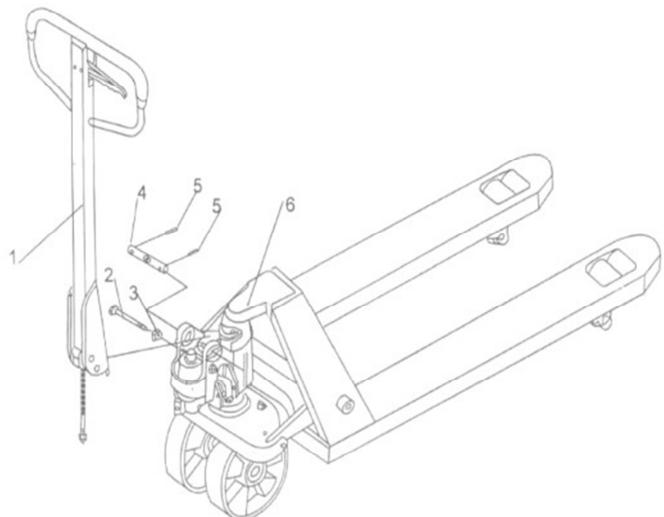


Fig.5 Tiller assembling (symbolic)
(1 Tiller arm / 2 Pin / 3 Nut! 4 Axle with hole / 5 Dowel pin / 6 Chassis with pump unit)

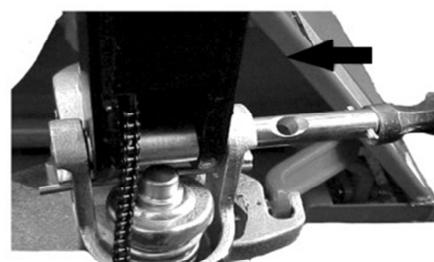


Fig.6: Axle assembling

e) Use a hammer to insert the 2nd dowel pin (5, Fig. 5) into the 2nd hole of the axle.
The draw-bar is now assembled to the pump.


For the HU ES 10B connect the control cable. Fix the cable at the pump side in a way that the cable holder can be turned. Fix the cable before the plug with the pre assembled cable strip.

b. Hydraulic valve adjustment

On the tiller of your pallet truck, you will find the control lever, which can be regulated in three positions:

a) Lever (HU HS 10B)

Lower	handle up, the lever moves back to the neutral when released
Slow lift	handle in center position
Quick lift	handle down

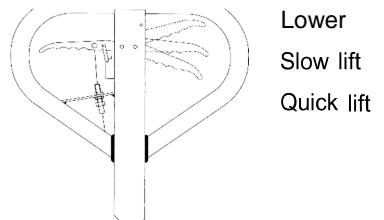

If necessary, you can adjust the lever according to following steps (Fig. 8):

Fig. 8: Lever HU HS 10B

- If the forks do not elevate while the control handle is in the **Slow Lift** position or **Quick Lift** position, turn the adjusting nut on the adjusting bolt counter-clockwise until the **Slow Lift** position and the **Quick Lift** position work properly.
- If the forks do not lower down while the control handle is in the **Lower** position, turn the adjusting nut clockwise until the **Lower** position works properly.
- If the forks do not lift slowly when the control handle is in the **Slow Lift** position, turn the adjusting nut clockwise until the **Slow Lift** position works properly.
- If the forks do not lift quickly while the control handle is in the **Quick Lift** position, turn the adjusting nut counter-clockwise until the **Quick Lift** position works properly.

b) Lever(HU ES 10B)

Lower	handle up, the lever moves back to the neutral
Neutral	handle in center position
Lift	handle down

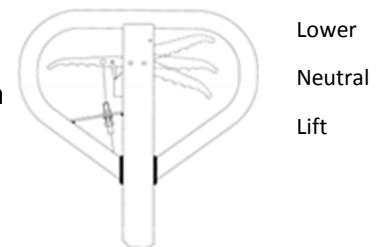


Fig. 9: Lever ACX1OE

If necessary, you can adjust the lever according to following steps (Fig. 9):

- If the forks elevate while pumping in the **Neutral** position, turn the adjusting nut on the adjusting bolt clockwise until pumping action does not raise the forks and the **Neutral** position works properly.
- If the forks descend while pumping in the **Neutral** position, turn the adjusting nut counter-clockwise until the forks do not lower.
- If the forks do not descent when the control handle is in the **Lower** position, turn the adjusting nut clockwise until raising the control handle lowers the forks. Then check the **Neutral** position according to fig. 9 and be sure that the adjusting nut is in the proper position.
- If the forks do not elevate while pumping in the **Lift** position, turn the adjusting nut counter-clockwise until the forks elevate while pumping in the **Raise** position. Then check the **Lower** and **Raise** position.

C. Lifting and Transporting

Lifting

USE DEDICATED CRANE AND LIFTING EQUIPMENT

DO NOT STAND UNDER THE SWAYING LOAD

DO NOT WALK INTO THE HAZARDOUS AREA DURING
LIFTING

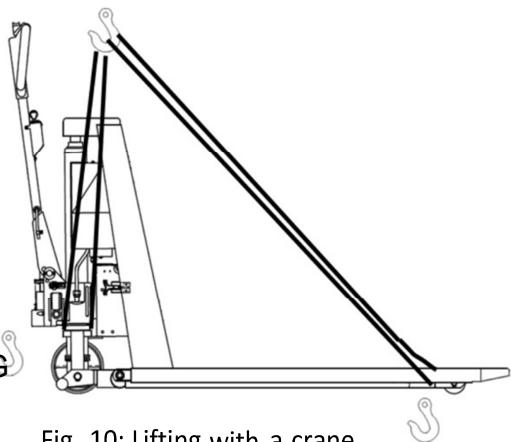


Fig. 10: Lifting with a crane

Park the truck securely and lash the truck according to the points identified in fig. 10. Lift the truck to its destination and place the truck securely before removing the lifting gear. The lashing points are according to the fig. 10

Transportation

For transportation, remove the load, lower the truck to the lowest position and lash it safe with dedicated lashing straps.

d. Storage/Reassembling

For storage, remove the load, lower the truck to the lowest position, grease all in this handbook mentioned greasing points (regularly inspection) and eventually protect the truck against corrosion and dust. Jack the truck safety, so that there will be no flattening after storage. Reassemble the tiller in the opposite direction of the assembling.

5. DAILY INSPECTION

This chapter describes pre-shift checks before putting the truck into operation.

Daily inspection is effective to find the malfunction or fault on the truck and can maximize the lifetime.

Check the truck on the following points before operation.

Remove load from truck and lower the forks to the lowest position.

DO NOT USE THE TRUCK IF ANY MALFUNCTION OR FAULT IS FOUND.

- Visually check for structural deformation or cracks of arms, forks, or any other component; and unusual noise or binding of the lifting mechanism.
- Check if there is any oil leakage.
- Check the vertical creep of the lifting mechanism.
- Check the smooth movement of the wheels.
- Check if there are any particles or damages on the wheels.
- Check if all the bolts and nuts are tightened firmly.
- If equipped, check the brake.
- Verify that all labels are in place.

6. OPERATING INSTRUCTIONS

- When operating the truck, the operator has to wear safety shoes.
- The truck is intended to be used for indoor applications with ambient temperatures between +5°C and + 40°C.
- The operating lighting must be minimum 50 Lux.
- It is not allowed to use the truck on angled surfaces.
- Never leave a loaded pallet truck unattended.

a. Parking

Lower the forks to the lowest position and park the scissor lift pallet truck on a smooth and even level ground where the truck not disturbs any other operations. If equipped with a brake use the brake for parking the truck acc. to the description further below.

b. Lifting

Check that the load does not exceed the loading capacity of the pallet truck. Roll the pallet truck with its forks slowly under the pallet/load until the back end of the fork rests against the load (Fig.11). Shift the operating lever down to the Lifting position. Lift the load by up- and down movements of the tiller arm. The load must be evenly distributed across both forks.

The truck is equipped with 2 supports. At a height of approx. 400 mm, the supports automatically set on the floor. Once the supports are in place, further movement is not allowed respective not possible.

For the electric version press the lifting button (Fig. 1, p05. 9) to perform the lifting function.

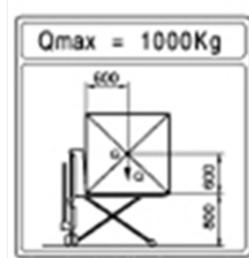


Fig.11: Load conditions

DO NOT OVERLOAD THE TRUCK!

C. Lowering

DO NOT PUT FOOT OR HAND UNDER OR INTO THE LIFTING MECHANISM.

 Lower the load by shift the operating lever up to the lowering position carefully. By releasing the lever, the lowering movement will stop. Ensure there is adequate clearance behind, then move the pallet truck away. Lowering can also be achieved by the pedal on the side of the truck.

d.Moving

- Do not operate the truck on a slope or inclined surface.
Watch difference of floor level when moving lifter. Load could fall down
Make the load stable to prevent it from falling down.
The truck might be not equipped with a brake. In this case the braking distance is longer and depends on the operator.

If equipped, release the brake.

Move the truck by pushing or pulling the tiller arm. The tiller arm is connected to the steering rollers. The wheels are steered automatically by moving or steering the tiller arm.

e. Quick Lift (HU HS 10 B)

When the lever is in the down position, it facilitates quick lifting. When handle the lever in neutral position, it facilitates slow lifting.

f. Malfunctions

If there are any malfunctions or the truck is inoperative, please stop using it. Place the truck at a safe place and avoid further usage.

Inform immediately the manager and, or call your service.

7. BATTERY CHARGING AND REPLACEMENT (HU ES 10B)

Only qualified personnel are allowed to service or charge the batteries. The instructions of this handbook and from the battery- manufacturer must be observed.

- These batteries are maintenance free; re-filling is prohibited.
- Recycling of batteries undergoes national regulations. Please follow these regulations.
- By handling batteries, open fire is prohibited, gases could cause explosion!
- In the area of battery charging neither burning materials nor burning liquids are allowed. Smoking is prohibited and the area must be ventilated.
- Park the truck securely before starting charging or installing/ changing the batteries
- Before finishing the maintenance work, make sure, that all cables are connected correctly and that there are no disturbing towards other components of the truck.
- HUES:10B: 2 pc 12V/52Ah

IT IS ONLY ALLOWED TO USE SEALED LIQUID ACID BATTERIES.
THE WEIGHT OF THE BATTERIES HAS AN INFLUENCE TO THE TRUCKS

PLEASE CONSIDER THE MAXIMUM OPERATING TEMPERATURE OF THE BATTERIES.

a. Replacement

FOR REPLACEMENT YOU NEED TO LIFT THE TRUCK. BLOCK THE SCISSOR MECHANISM AGAINST LOWERING!

Park the truck securely and switch off the truck with the key switch (Fig. 1, pos. 7) and remove the emergency plug (Fig. 1, pos. 9). Loosen the upper cover with the 2 screws. Also remove the backside fixing bar (also with 2 screws). Disconnect the terminals (Fig. 12) and take the battery out.


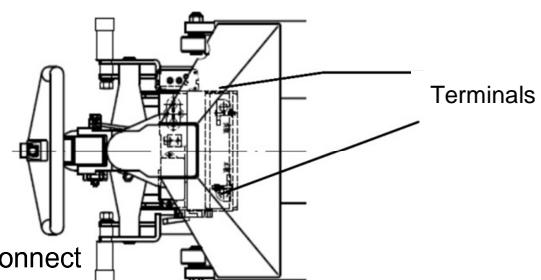


Fig. 12: Battery placement


The installation is in the reverse order of the removal. Please connect the positive terminals firstly; otherwise the truck could be damaged.

b. Battery indicator

Discharge status is indicated by ten red LED segments.

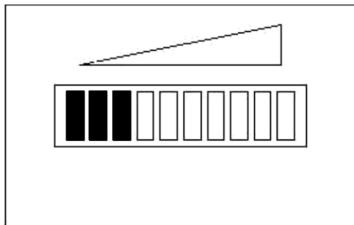

Battery discharged

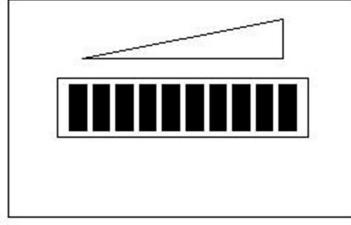

Battery full charged

Fig.13: Battery discharge indicator

- When the battery is properly charged, all LED lights. During discharge successively less LEDs lights up.
- When the most 3 left LEDs lights, the battery is fully discharged. The battery must be charged before further operations, otherwise the lifetime of the battery will be reduced and/or the battery could be damaged!

d. Charging with Onboard charger (only HUES10B, optional)

The attached automatic charger is only available for the optional voltage of 110V or 220V as referred.

- The room, where you are charging must be ventilated.
- The exactly charge status can be only checked from the dischrge indicator. To control the status, the charging must be interrupted and the truck must be started.
- Park the truck at a dedicated secured area with a deidcated power supply. Lower the forks and remove the load.Switch the truck off and connect the main power connector to the power supply.The charger starts charging the battery.
- This Charger features a three-stage charging function with automatic switching from 1st stage to the next stage.

The 1st stage: Constant current charging

The 2nd stage: Constant voltage charging

The 3rd stage: Floating charging

Following the increase of the electricity in the battery, the charging electrical current is reducing, the charger steps into the 3rd stage automatically.

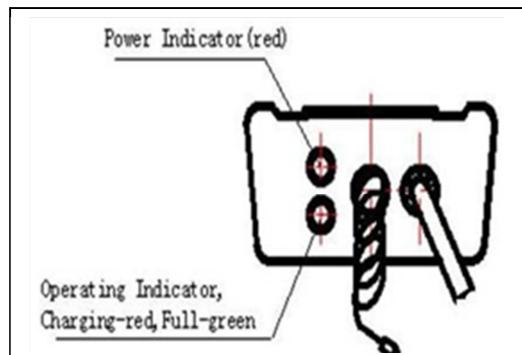


Fig. 14: LED- Status

A. SPECIFICATIONS

Input Volt: 150 – 260 V, AC 50 – 60 Hz

Output Volt: 145 V ±0.3

Output Current: 5 - 6 Amp

Applicable Ambient Temperature: -15 + 65°C

B. OPERATION

1. Insert the plug of the power cable into the socket of the power line.
 - 1) Power Indicator lights (red)
 - 2) Charging Indicator turns on red, indicating the battery is in charging.
2. When Charging Indicator turns from red to green, the battery is nearly full. Charging can continue in the Floating Stage.
3. When the battery is fully charged, disconnect the Power Cable from the Power Line.
+12 V Output Cable has power.

C. WARNING

1. During charging the truck can't be lifted electrically!
2. Do not use the truck in wet areas or conditions.

Table 3: Charging LED

LED- signal	Function
Red	Battery discharged
Green	Fully charged

When charging is finished, disconnect the connector from the socket and place it in the designated pocket.

8. REGULAR MAINTENANCE

Only qualified and trained personnel are allowed to do service on this truck.

Before servicing the truck, remove the load and lower the forks to the lowest position.

- Completely immobilize the truck before working on components that might pinch fingers or hands if movement were allowed.



- Use approved and from your dealer released original spare parts.
- Please consider that oil leakage of hydraulic fluid can cause failures and accidents.
- It is allowed to adjust the pressure valve only from trained service technicians.
- Waste material like oil, used batteries or other must be probably disposed and recycled according to the national regulations and if necessary brought to a recycling company.
- All bushings and bearings have been lubricated at the factory. To increase their life, regular maintenance is recommended. Using the appropriate grease for the application and lubricate each grease fitting every 6 months.
- Harsh environments may require more frequent maintenance.

If you need to change the wheels, please follow the instructions above. The wheels must be round and they should have no abnormal abrasion. By changing the wheels secure the truck by using dedicated equipment.

a. Maintenance Checklist

DAILY

- Follow chapter 5.

MONTHLY

- All bearings and shafts are provided with long-life grease at the factory. Long-life grease should be applied to the lubrication points at monthly intervals or after each time the truck is cleaned.
- Clean off dirt and debris.

EVERY THREE MONTH

- Check the set-up of the drain-valve

ANNUALLY

- Change the oil (more frequently if color has substantially darkened or feels gritty). The required hydraulic fluid type is ISO VG32, its viscosity should be 30cSt at 40°C, total volume is about 1 - 1.3 l.
- Check all parts of the truck for wear and replace defective parts where necessary.




NOTE: If hydraulic oil is milky white in color, water is in the hydraulic system. Change the hydraulic oil immediately.

Before starting operating the truck, ensure that all markings and decals are on the right place and not damaged (acc. to Fig. 3). If necessary replace the decals.

b. De-aeration of the hydraulic system

Air may find its way into the pump during transportation, tilting or usage on uneven ground. It can result in not elevating forks whilst pumping in the Raise position. The air can be removed in the following way: Move the control handle to the Lower position, move then the tiller down several times. Thereafter normal operation can be resumed.

		<p>defective</p> <ul style="list-style-type: none"> • Hydraulic pump does not work 	
	Raised load is lowering automatically.	<ul style="list-style-type: none"> • Leakage in the hydraulic system • Lowering valve does not close any more or the valve unit is not sealed because of dirt - Incorrect valve set-up. • Pressure relief valve (pump) has leakage (pump turns slowly backwards.) 	<ul style="list-style-type: none"> - Replace the seal - Clean or replace the valve - Adjust the lowering valve
4	Oil loss on hydraulic cylinder	<ul style="list-style-type: none"> - Sealing worn out or defect 	<ul style="list-style-type: none"> - Replace the sealing
	The raised load is lowered too slowly	<ul style="list-style-type: none"> - Temperature too low – the hydraulic system oil is too thick 	<ul style="list-style-type: none"> - Operate the truck in warmer locations.
6	Fork does not raise till upper position	<ul style="list-style-type: none"> - Insufficient oil in the tank - Battery discharged 	<ul style="list-style-type: none"> - Refill with oil (while the forks are lowered) - Charge the battery
7	Battery capacity to low	<ul style="list-style-type: none"> - Battery is not charged enough - Battery is defective 	<ul style="list-style-type: none"> - Recharge - Replace the battery
8	Battery cannot be charged	<ul style="list-style-type: none"> - Fuse FU2 is defective - Battery resp. charger defective 	<ul style="list-style-type: none"> - Replace FU2 - Replace battery resp. charger
9	Fast battery discharge	<ul style="list-style-type: none"> • Silted battery • Sulfating or other failure in the battery. • Accidental earth contact in the electric system or battery. 	<ul style="list-style-type: none"> - Replace battery - Repair or replace battery

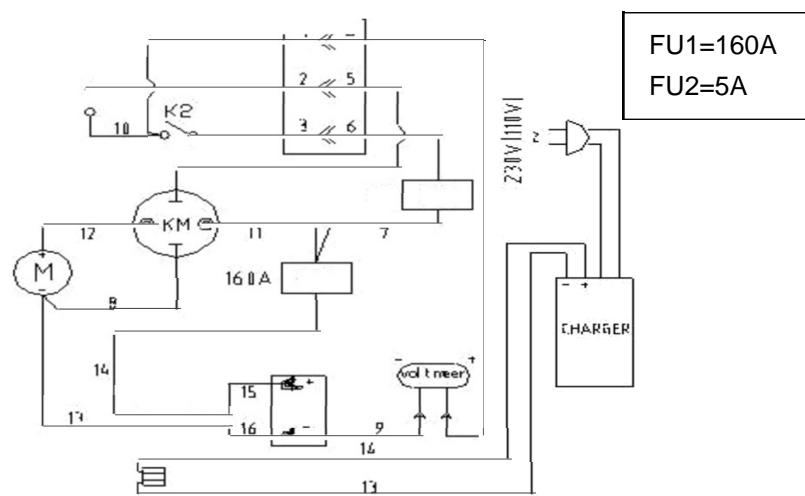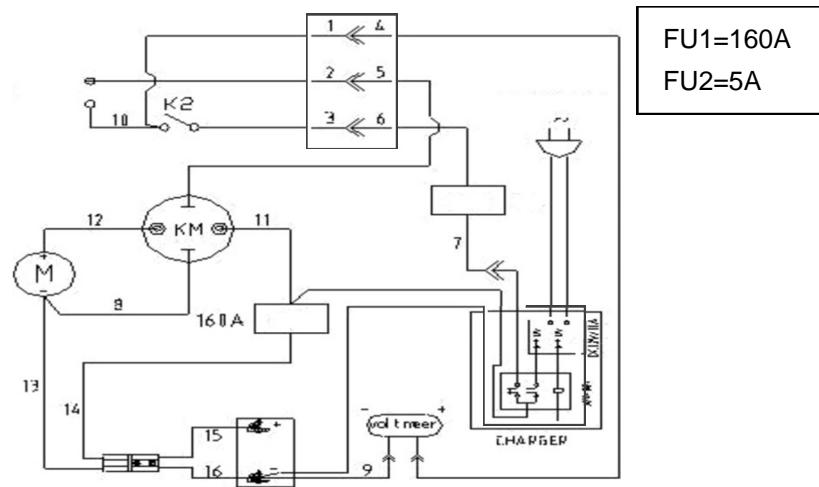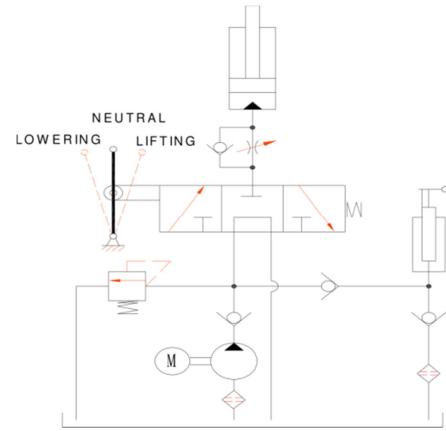

12. DECLARATION OF CONFORMITY (valid, if sold within the EU)

[GB] CE Declaration of Conformity

The signatory hereby declares that the specified machine conforms to the EU Directive 2006/42/EC (Machine Directive) and 2004/108/EEC (Electro-Magnetic Compatibility, EMC) including their amendments as translated into national legislation of the member countries. The signatory is individually authorized to compile the technical documents.

[DE] EG-KONFORMITÄTSERKLÄRUNG

Der Unterzeichner bescheinigt hiermit, dass die im Einzelnen bezeichnete Maschine den Europäischen Richtlinien 2006/42/EG (Maschinenrichtlinie) und 2004/108/EWG (Elektromagnetische Vertraglichkeit - EMV) einschließlich deren Änderungen sowie dem entsprechenden Rechtsvertrag zur Umsetzung der Richtlinien in nationales Recht entspricht. Der Unterzeichner ist bevollmächtigt, die technischen Unterlagen zusammenzustellen.

[ES] DECLARACIÓN DE CONFORMIDAD CE

El signatario certifica por medio de la presente que la máquina especificada cumple con las Normas Europeas 2006/42/CE (Normativa para maquinaria) y 2004/108/CE (Compatibilidad electromagnética), incluyendo sus respectivas modificaciones, así como con el decreto-ley para la adaptación de las normas al derecho nacional. El signatario dispone de una autorización individual que le permite compilar la documentación técnica.

[FR] DECLARATION DE CONFORMITE CE

Par la présente déclaration, les soussignés certifient que le machines spécifié ci-dessus est conforme à la loi et aux directives européennes 2006/42/CE (directive sur les machines) et 2004/108/CEE (compatibilité électromagnétique - CEM), y compris aux modifications qui y sont apportées et à l'arrêté autorisant sa transposition en droit national. Chaque signataire est habilité à établir individuellement la documentation technique.

[NL] EG-CONFORMITEITSVERKLARING

Ondergetekenden verklaren hierbij dat - volgens de nationale wetgeving van de Lidstaten - de hierboven vermelde opgegeven machina beantwoordt aan de bepalingen qua veiligheid bij machines (EG richtlijn 2006/42/EC) en electro-magnetische compatibiliteit (EG richtlijn 2004/108/EEC). Ondergetekenden zijn ieder individueel gemachtigd het technisch dossier samen te stellen.

[PT] DECLARAÇÃO DE CONFORMIDADE CE

Pela presente, os signatários certificam que o máquina especificado está conforme as Directivas Europeias 2006/42/CE („Maquinas”) e 2004/108/CEE („Inocuidade Electromagnética - IEM”), incluindo as alterações das mesmas e o respetivo decreto-lei para a transposição em lei nacional. Cada um dos signatários está autorizado a proceder à elaboração da documentação técnica.

[IT] DICHIARAZIONE DI CONFORMITÀ CE

I sottoscritti dichiarano che il veicolo per trasporti interni a macchina specificato soddisfa le Direttive Europee 2006/42/EC (Direttiva Macchine) e 2004/108/EG (Compatibilità elettromagnetica - EMV) comprese le relative modifiche, come pure il rispettivo decreto legislativo per la conversione delle due tute in diritto nazionale. I sottoscritti sono singolarmente autorizzati alla creazione della documentazione tecnica.

[IE] EBPOFIEICKA OBLUHOCT fJEKJ1APAI4II5I 3A CbOTBETCTBME

flonUcaHL4Te yocToBepiBaT c HacTo51LLeTo, Lie nopo6Ho oncaao MawUHa cpecTB0 OTOPB1 Ha eponeicci HOOpMaTL'IB 2006/42/EG (HOOpMaTLIB a MaWUHU) H Ha 2004/108/EG (eneIcupo-MarHeTw.Ha cbBMecTIIIMocT), BKJ1IOLIiTJeJ1HO c TXH11T fIpoMeHII, KaKT0 U Ha cboTBemi1 yKa3 3a npwnarae Ha HOPMTUBUT B HltUOHOIOTO npaBo. flonwcaHUTE npw TOB ca ynbnHOMOLI.teHUM fIOOTfI1HO R cbcTaBUT exwLiecaa oKyMeHTawfl.

[CZ] EG PROHLASENI O SHODE

Nie podepsan tlmo potvrzuje, e podrobn popis uvedené stroje odpovídá Evropskym směrnicím 2006/42/EC (směrnice pro stroje) a 2004/108/EEC (elektromagnetická interference - EMV) vCetně jejich pozdějších úprav, jako i príslušném právním vnosCm pro uplatnení plní unijné směrnice v rámci národního práva. Kad'z podepsan9chjsou jednotlivé zplnomocnění k vytvoení technických podkladů.

[DK1] FF-OVERENSSTEMMELSESKRIFT

Undertegnede attesterer hermed, at det specificerede maskine stemmer overens med de Europiske Direktiver 2006/42/EU (maskindirektiv) og 2004/108/EOF (elektromagnetisk kompatibilitet - EMC) samt med den modsvarende lovgættelse til implementering af direktiver i den nationale lovgivning. De undertegnede er hver for sig befejet til at sammenstille de tekniske dokumenter.

[EST1] Ei vastavusavaldis

Allakirjutanud tõendavad käesolevaga, et üksikasjaliselt kirjeldatud täpsustatud masin vastab Euroopa direktiividile 2006/42/EU (Direktiiv masinate kohta) ja 2004/108/EMU (Elektromagnetiline sobivus - EMS) kaasa arvatud nende muudatused ja nendele vastavatele Oigusmaarustele direktiividile muutmiseks siseriiklikuks õiguseks. Iga allakirjutanu üksikult on volitatud koostama tehnilist dokumentatsiooni.

[FIN1] EU-YHDENMUKAISUUSSELOSTUS

Allekirjoittaneet todistavat täten, että kunkin erikseen mainitun omalla voimanlähteellä varustettu tehdaskone vastaa EU-direktiivien 2006/42/EC (koneenrakennusdirektiivi) ja 2004/108/EEC (sähkömagneettinen yhteensovivuus - EMC) määräyksiä sekä niiden muutoksia ja niiden kansalliseen lainsaadantoon soveltuvaltaa koskevaa oikeussaantoa. Jokaisella allekirjoittaneista on oikeus itsenäisesti laataa asiaankuuluvia teknisiä asiakirjoja.

[GR1] AHAQH £YMMOPOQH EOK

Di uroypcipovc I3El3ollövou öid Tqç rrappoUoqc OTI TO aUyKEKpljJEvo pnxalInpa ouJpopcpwvETcll rrpqç Tqv KolvotIKI Ôôryio 2006/42/EK ("MqXovrpTo") Kol 2004/108/EOK (HAEKTpolJoyvqTIKrc ZulJPOTOTflT0g, HMZ), Ko8GJc KOI 01 Tp0Tr01TolrcJEIç Touç, orrwg pETO(ppacJTqKE OTfIV E8vIKq vopo8Eoio Twv xwpv jJEAWv. Ci urroppacpovTEç Lival ok KQ8E TTEplTTwoi EuololoöTpqEvol OTOIJKO va KQTQPTIOOUV TO TEXVIKQ Eypa(pa.

[HI] EU KONFORMITASI NYILATKOZAT

Alullrottak ezennel igazoljak, hogy a részletesen leírt a megfelel a 2006/42/EC (Gep-Iranyelv) és a 2004/108/EEC (Elektromagneses osszeferhetőség - EMV) Európai Irányelvnek, beleértve azok modosításait, valamint az irányelv nemzeti jogba történő átültetésére irányuló megfelelo jogi rendelkezést. Továbbá az alullrottak mindegyike rendelkezik meghatalmazással arra névre, hogy osszeallthatja a műszaki dokumentációt.

[LT1] ES atitikimo' deklaracija

Zemiau pasirač asmenys patvirtina, kad atskirai apraytas nurodyta maaina atitinka Europos Sajungos direktyvas 2006/42/EB (Maaini4direktyva) ir 2004/108/EEB (Elektromagnetinis suderinamumas – EMS) (skaitant jų pakeitimus, o taip pat ir atitinkamfteisés aktft del direktyvI4 [gyvendinimo nacionalinėje teisėje]. Kiekvienas pasiraiusiu asmeni turi teis ruoti technin dokumentaciją.

[LV1] ES atbilstības deklarācija

Ar zemak redzamajiem parakstiem tiek apliecinats, ka noradits maina atbilst Eiropas Savienibas normatjvam **2006/42/EG** (MaTnu normatlvas) un 2004/108/EWG (Elektromagnetiska atbilstlba – EMV), ieskaitot to izmaios, ka arT atbilstoos tiesiskos rkojumus normatlvu pielagoanai nacionajai likumdoanai. Parakstu Tpanieki ir atsevi pilnvaroti sastadit tehniskas dokumentacijas.

[EN] EU-KONFORMITETSERKLARING

Undertegnede bekretter hermed at de enkelte betegnede maskin med krattdritt tilsvarer de europeiske retningslinjene 2006/42/EC (maskinretningslinje) og 2004/108/EEC (elektromagnetisk fordraglighet - EMV) inklusiv disses endringer og den tilsvarende rettsforordning til omsetning av nasjonal rett. Hver undertegnede er fullmektig til å sette sammen de tekniske dokumentene.

[PL] PL1 DEKLARACJA ZGODNOSCI Z NORMAMI UE

Niejs podpisani potwierdzaj4 niniejszym, że opisany tutaj, napdzany okreona maszyna spetnia wymagania okreone w dyrektywach Europejskich 2006/42/EC (Maszyny) i 2004/108/EEC (Nieszkodliwość elektromagnetyczna - EMC) wraz z ich późniejszymi zmianami oraz odpowiednimi rozporządzeniami mającymi na celu przekształcenie tych dyrektyw w prawo krajów czionkowskich. Niiej podpisani są pojedynczo upoważnieni do zestawiania dokumentacji technicznej.

[RO] DECLARATIE DE CONFORMITATE CE

Subsemnath adeveresc prin prezentă că vehiculul de specificat mai�ă descrie individual corespunde directivelor europene 2006/42/CE (Directiva privind mainile) 2004/108/CEE (Compatibilitatea electromagnetică - CEM) inclusiv moditicărilor br precurătorului legislativ corespunzător prentru transpunerea directivelor în drept național. Subsemnata sunt tiecare în pane imputernici (sa intocmească documentația tehnică.

[RU] eKJ1apq1.1n COOTBTCTB14fl CTHRPTM EC

HaCTO5IL14HM nwL4a, nonwcawwe R0KyMeHT, y)ocToBepc1ioT, YTO MawwHa C yKa3aHHOW cneL4klcJklKaL4wew COOTBTCTBT eBponel'icKWM 2006/42/EG (TpaHcnopTHas wlpcTfriBa) w 2004/108/EWG (3neicrpomanuTHan C0BMeCTl'lMoCTb - EMC), icnioaci fri3MHfri1 B HLIX, a aioe COOTBTCTB10H4HM HB14L'IOHafibHIM CTHR8PT8M LI HopMaM. KawRoe no 0TRePbH0CTI'I J11'1140, nQqn'lcaBwee R0KyMeHT, LIMeT nOJ1HOMOYL'151 RJ1S COCTabJ1eHL/1S TeXHwYeCKol.RokYMeHTaLfLfri.

[SI] EG-KONFORMITETSFORKLARING

Undertecknarna intygar harmed att det i detalj betecknade maskin uppfybler de Europeiska direktiven 2006/42/EG (Maskindirektiv) och 2004/108/EEG (Elektromagnetisk tålighet - EMV), inklusive andningarna i detta och den motsvarande rattstörordningen tor att omsätta direktiven i nationell rätt. Undertecknarna har var tor sig tullmäkt att sammanställa den tekniska dokumentationen.

[SK] vvhlásenie o zhode

Dobu podplaslni t9mto potvrdujeme, že podrobn9 popis uvedené stroje Zodpovedá Európskym smerniciam 2006/42/EC (ernica pre stroje) a 2004/108/EWG (elektromagneticá tolerancia – EMV) vrátane jeho neskoréh uprav, rovnako zodpovedá aj príslušenm právym nariadeniam na uplatnenie smernic v rámci národného práva. Kad9 z podpisom9ch je jednotivo spnomocnen9 na vytvorenie technick9ch podkbadow.

[SLO] EU IZJAVA O SKLADNOSTI

Podpisani s tem potrijemo, da posamično označeno doboženo stroj voziba odgovarja Evropski direktivi 2006/42/EC (Direktiva o strojih) in 2004/108/EEC (Elektromagnetna skladnost - EMV) vključno z njihovimi spremembami ter ustrezno pravno uredbo o prevzemu smernic v nacionalno pravo. Podpisniki so vsakokrat posamezno pooblaščeni za izdajanje tehnične dokumentacije.

[TR] AB Uvqunluk Acikiamasi

İmza sahibi ahıslar, ayrintılıları belirtilen makine aracının, 2006/42/EC (Makine Yonergesi) ve 2004/108/EEC (Elektromanyetik Uyumluluk – EMC) no'lu Avrupa Yonergelerine ve bunların deii̇liklik sonucu olukan metinlerine ve yonergelerin milli hukuk hOkOmllerine donotolmesine dair ilgili hukuk kararnamesine uygun olduunu tasdik ederler. İmza sahibi ahıslar teknik dosyalari bir araya getirmek için mOnteriden vekil tayin edildi.

(1) Type/ Typ/ Tipo/ Modello/ Typpi/ Tipo / TYflOZ/ Tipus/ Tip/ Twn/ Tips/ Tipas/ TOOp:

(2) Serial No./ Serien-Nr./ N°. de série/ Serienummer/ N de serie/ Numero di serie/ Serienr./ Sarjanro/ ouUvw opiepóč/ Seriové Osibo/ Szérialszám/ Nr.Seryjny/ Senijska étevíalka/ V9robné Oisbo/ CepwlHbil HoMep/ Sen No./ Seerianr./ Serijas Nr./ Senijos numenis:

(3) Year of constr./ Baujahr/ Année de constr./ Bouwjaar/ Ano de constr./ Anno di costruzione/ Produktionsår/ Byggeår/ Tillverkningsår/ Valmistusvuosi / Ano de fabrico / eoç coTocxKzuqc/ Rok v9roby/ Gyártási év/ Rokprodukci / Letnik / roR l3rotobjelHili / Uretim yılı / Valjaskeasta / Izgatuvéanas gads / Gamybosmetai

(4) Manufacturer or his authorized representative in Community/ Hersteller oder in den Gemeinschaft ansassiger Vertreter/ Fabricant ou son mandataire établi dans la Communauté/ Fabrikant of zijn in de Gemeenschap gevestigde gemachtigde/ Fabricante o representante establecido en la Comunidad/ Construtor ou Representante estabelecido na Comunidade/ Costruttore oppure il suo rappresentante nella Comunità/ Fabrikant ellen dennesi Fillesskabet etablerede betuldmwgtigede/ Produsent ellen agent innen felleskapet/ Tillverkare ellen representant mom EU/ Valmistaja tai yhteisomaassa oleva edustaja / Vrobce nebo jeho zastoupeni/ Gyántó / producent albo jego przedstawiciel w EG (Wspólnota Europejska)/ Koq(9zroqño oKqivo qvuq&ba oAqqrvthnaA/ Uretici ya da BOlgdedeki Yetkili Temsibci/ Proizvajalec ali pooblaščeni zastopnik s sedežem v EU/ V9robca alebo zástupca so stálým bydliskom v EU / kl3noToBwTenb iníni eno npeRcTaBwTenb, B CTH CoRpyN<ectBa/ Tootja véi organisatsioonis paiknev esindaja/ Ražotajs vai vetejais uzgēmuma parstavis / Gamintojas anba éalyje reziduojantis atstovas:

(5) Date/ Datum/ Data/ Fecha/ datum/ Dato/ paivays/ Kuupaev/ Datums/RaTa / Déatum/ déatum/ tanih/ qpepopqvio

(6) Authorised signatory/ Im Auftrag/ pour ordne/ Incanicato/ Por orden de/ pon pnocunaçao/ op last van/ pé vegne at/ pé uppdrag/ Etten oppdag/ psta./ Ulesandel / pavedus / vi. / [To nopyevno / megbizésébel /Rrn,wHocmo nwie / z povéeni / z poverenia / O nabogu / na polecenie / din sarcina/adina/eon'sAqvifl

If you can read this text:

- Your truck might be sold outside the EU; this declaration is then not valid.
- Or the declaration is not complete.
- In this case please ask for a copy